


Mountain Bluebird Trails Conservation Society Nest Box Pattern

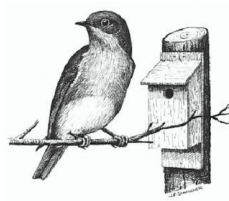

- Use 8 x 1 3/4" zinc plated wood screws and all weather glue
- Drill 1 9/16" entrance hole 2" below top of front, round off sharp edges
- saw 5 1/8" kerfs on inside of front @ 3/4" spacing below entrance hole
- roof cut at 22.5 degrees
- 3 screws on front joints, 4 on back joints
- use glue & screws to join front to sides
- join back to sides
- install floor
- attach ridge cap
- insert roof into ridge cap
- mark inside of walls on inside of roof
- join roof insert to roof
- drill 3/8" vent holes @ 30 degrees upward
- drill 1/8" holes across corners 1/2 way down front

Materials: 3/4" fir plywood

Roof insert 5 3/8 x 4 1/4" (3/4 or 1" plywood)

Roof 10 1/4 x 10 1/4"

Floor 5 x 5 1/4" (3/4 or 1" plywood)

Front 7" wide x 10 3/4" high

Sides 5 1/2" wide x 10 3/4 & 13" high

Back 7" wide x 14 1/2" high

Metal ridge cap L shape 1 1/2 x 3" x 10 1/4" long

